
### **Current Transformers CT**



- Solid core
- Primary current up to 1 000A

We offers wide range of solid core current transformers. Their purpose is in measuring primary currents and produce a proportional secondary current signal. They are perfectly suitable for installation in combination with a Ex9EMS 3P 4M CT smart energy meters and Ex9EM 3P 4M CT 1T energy meter.

### Type Key

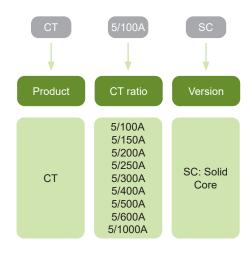

**Certification marks** 





### **Current Transformers CT**

### **Current transformers - Solid core**

• Primary current up to 1000A



Ratio	Article No.	Туре	Packing
5/100A	107301	CT 5/100A SC	1/1/100
5/150A	107302	CT 5/150A SC	1/1/100
5/200A	107303	CT 5/200A SC	1/1/100
5/250A	107304	CT 5/250A SC	1/1/100
5/300A	107305	CT 5/300A SC	1/1/100
5/400A	107306	CT 5/400A SC	1/1/60
5/500A	107307	CT 5/500A SC	1/1/60
5/600A	107308	CT 5/600A SC	1/1/60
5/1000A	107309	CT 5/1000A SC	1/1/30



## Technical Data CT

#### **Current transformers**

### General parameters

Primary current up to 1000A

Solid core

Electrical parameters	
Max. rated voltage	660 V
Rated frequency f	50/60 Hz
Primary current	100 - 1 000 A
Secondary current	5 A
Class	0.5
Rated insulation voltage U <sub>i</sub>	3 kV
Burden	5//100 2.5 VA 5/150 - 5/300 5 VA 5/1000 10 VA

Mechanical parameters		
Device width		
5/100 - 5/300	34 mm	
5/400 - 5/600	40 mm	
5/1000	59 mm	
Device height		
5/100 - 5/300	81 mm	
5/400 - 5/600	100 mm	
5/1000	121 mm	
Device depth		
5/100 - 5/300	61 mm	
5/400 - 5/600	82 mm	
5/1000	125 mm	
Terminals	screw terminals	
Cable aperture		
5/100 - 5/300	23 mm	
5/400 - 5/600	37 mm	
5/1000	50 mm	
Ambient temperature	-25°C — +40°C	
Weight		
5/100 - 5/300	0.25 kg	
5/400 - 5/600	0.35 kg	
5/1000	0.59 kg	



### Technical Data CT


#### **Current transformers**

# **Dimensions** CT 5/100A SC CT 5/150A SC CT 5/200A SC CT 5/250A SC CT 5/300A SC 80 CT 5/400A SC CT 5/500A SC CT 5/600A SC 100 CT 5/1000A SC 121

### **Technical Data CT**

#### **Current transformers**

#### Wiring diagrams

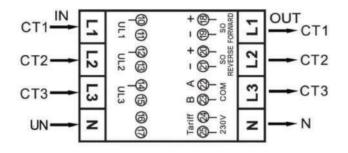

S1 (on CT) to L1 IN (on the Meter) S2 (on CT) to L1 OUT (on the Meter)

P1 (on CT) = IN P2 (on CT) = OUT

Note: Be sure that the cables are in the right direction. If the CT is in the wrong way, then the meter will read in reverse.

5